WIRELESS CHARGING INSTRUCTIONS

Open the Velcro® in the back of the headband. Remove the Bluetooth® module by unplugging it from the speakers. Plug the micro-USB cable into the micro-USB port on the Bluetooth® module. Plug the standard USB end of the cable into the USB port on your computer or any USB wall adaptor.

The Bluetooth® module comes with a partial charge. When you plug the module in to charge, you will notice a blinking red light. The red light will turn off when the Bluetooth® module is fully charged. A fully charged module will play for up to 13 hours.

PAIRING INSTRUCTIONS

Before pairing, fully charge your RunPhones® Wireless headphones.

Place your Bluetooth® device within 3 feet (1 meter) of your RunPhones®.

Find the middle square button on the wireless Bluetooth® module located inside the headband

Press and hold the square button for 5 full seconds until you hear an ascending 3 ring tone followed by a series of beeps indicate that the module is in pairing mode.

Next, go into the Bluetooth® settings on your device and turn on Bluetooth®.

After a few seconds, "AcousticSheep" will appear in the list of devices. Click on "AcousticSheep" to pair your device to the Bluetooth® module. You will hear a long beep to indicate that it is paired with your device.

-OR-

Navigate to the Bluetooth® connections menu on your Bluetooth® enabled device. When "AcousticSheep" appears, click to pair your device to the Bluetooth® module. You will hear a long beep to indicate that it is paired with your device.

To watch our video on how to use RunPhones® Wireless visit: www.RunPhones.com/runphones/video

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by AcousticSheep LLC are under license. Other trademarks and trade names are those of their respective owners.



Ouick Start Guide

OPERATING INSTRUCTIONS

VOLUME: Click the "up" arrow button to increase the volume. Holding the "up" arrow button will also increase the volume at a faster pace. Click the "down" arrow button to decrease the volume. Holding the "down" arrow button will also decrease the volume at a faster pace.

SKIP TRACK(S): Double click the "up" arrow button to advance to the next track. Double click the "down" arrow button to go to the previous track.

PAUSE: Click the middle square button once to pause the music. Click once again to resume playing music.

POWER OFF: To turn the device off, press and hold the middle square button for 3 seconds. You will hear a descending 3 ring tone.

TROUBLESHOOTING	
NOT SURE IF FULLY CHARGED	While charging, if the red light is on, the module is not fully charged. If there is NO light on at all while charging, the Bluetooth [®] module is fully charged.
UNABLE TO PAIR FOR THE FIRST TIME	When you turn on the device, make sure to continue holding down the button for a full 5 seconds until you hear an ascending 3 ring tone followed by a series of beeps. The beeps indicate that the module is in pairing mode.
UNABLE TO PAIR	If your Bluetooth® enabled device is unable to pair with the AcousticSheep® module, you may need to reset the Bluetooth® module. To reset the Bluetooth® module, turn it on. Hold both the "up" and "down" arrow buttons down for 7 seconds. Once the reset function is complete there will be two long tones. The Bluetooth® module must be turned off and then turned back on for it to enter into pairing mode.
UNABLE TO FIND THE DEVICE	If your AcousticSheep® module was previously paired with another device, it will automatically pair with that device if the device is within range. Make sure that the Bluetooth® on all other previously paired devices is turned off or out of range when you are pairing with a new device.
THERE IS NO SOUND WHEN PAIRED	Slide the speakers inside the headband to position them over your ears. Check the volume on your Bluetooth® audio player. Check the volume on the wireless Bluetooth® module located inside the headband. Make sure that the wireless Bluetooth® module is charged. If your Bluetooth® device is separated from your RunPhones® Wireless headphones for more than 5 minutes, the headphones will automatically power off. Not all applications or software support Bluetooth®.